

Installation Instructions for Conoco Pump Valance




This product is designed to fit the Conoco Valance Pumps. Please verify that your site is in this size before beginning. Otherwise contact LSI Graphic Solutions Customer Service 1-(800) 231-0129 for special mounting adapter hardware.


Read through all of the instructions prior to beginning installation and verify (using the packing list) that all parts have been received and in good condition.



Part List

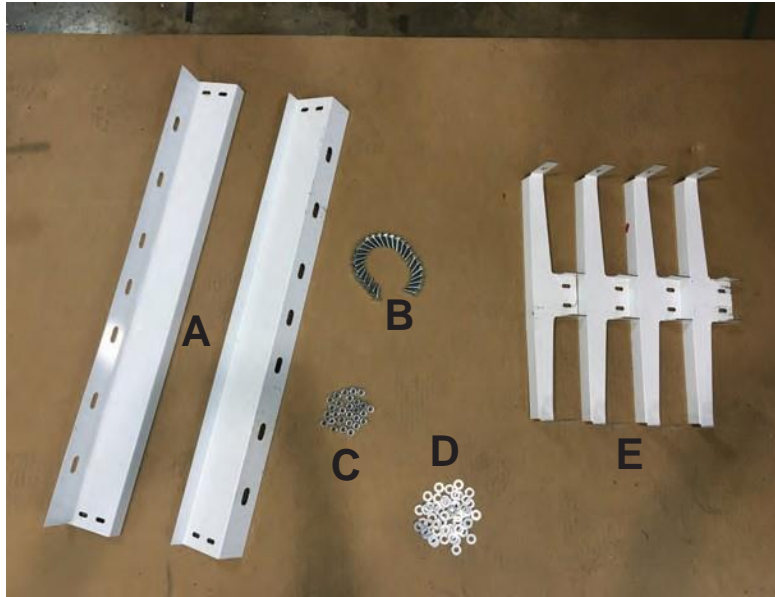


- A: Z Bracket (2 per valance) PN:
B: 1/4" x1" Bolt (28 per valance) PN:
C: 1/4" Nut (28 per valance) PN:
D: 1/4" Washer (56 per valance) PN:
E: Side panel bracket (4 per valance) PN:

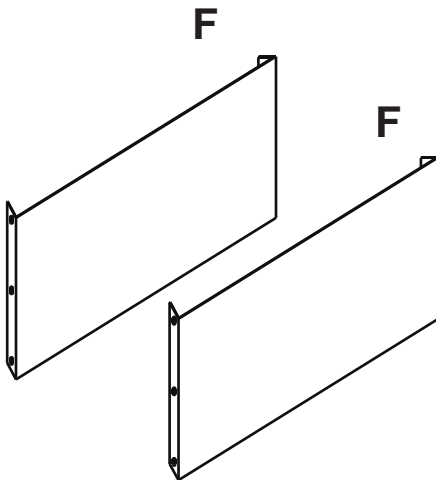

- F: End Panel (2 per valance)
G: Side panel (2 per valance)



Step 1: Unpack the valance and identify the style of pump that the valance will be fitted to. The standard unit fits Encore, Encore S, Advantage 48, Vista 48, and MOD dispensers.

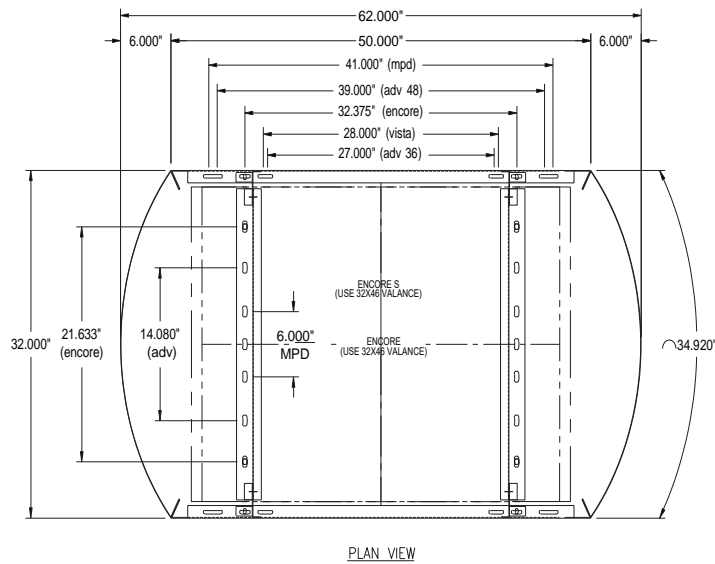

Step 2: Identify the two side panels (Part G), making sure the “Top” sticker is on the top side. Take the side panel brackets (Part E) and install 2 per side panel using the 1/4" x 1" bolts (Part B) provided. Next, attach the Z bracket (Part A) to the side panel bracket using the same bolts, assuring that the bolts are facing outward before installation. Repeat this process on the other side, attaching the two side panels together.



Side Panel Bracket (Part E)




Z bracket (Part A)




Step 3: Locate the end piece (Part H) and line it up with the holes on the end of the side panels. Using the 1/4" x 1" bolts (Part B) provided, fasten the end piece to the side panel. Repeat this process on both sides and make sure that the pieces fit flush together.



The end result should look like this after cold forming the flat end to a curved end as shown here.

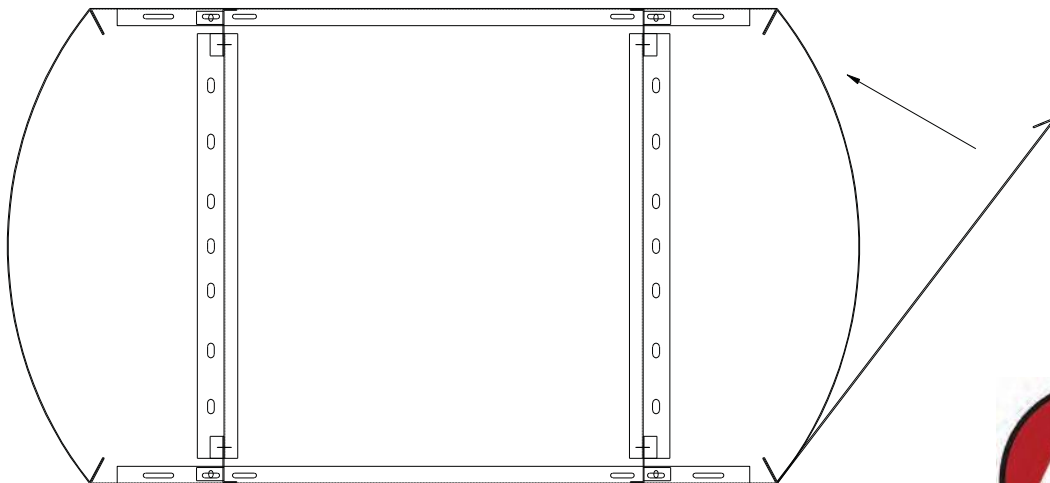


Step 5: After it is fully assembled, place the valance on top of the pump and adjust the brackets to allow the 1/4" x 1" bolts to go into the proper holes. The brackets adjust left and right, with holes on each bracket for the bolts.

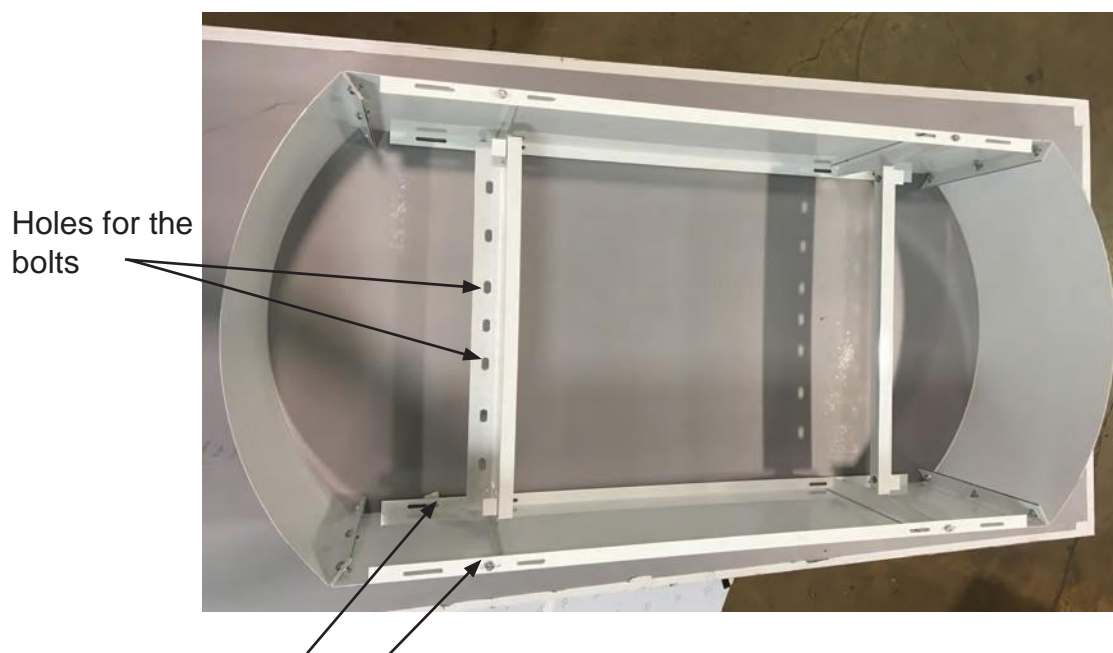

Bracket can be adjusted left and right to fit the width of the valance on sight

Step 6: Adjust the bracket as necessary before installation. using the bolts in the lifting lug of the dispenser, bolt the valance onto the top of the pump, ensuring a tight and clean fit.

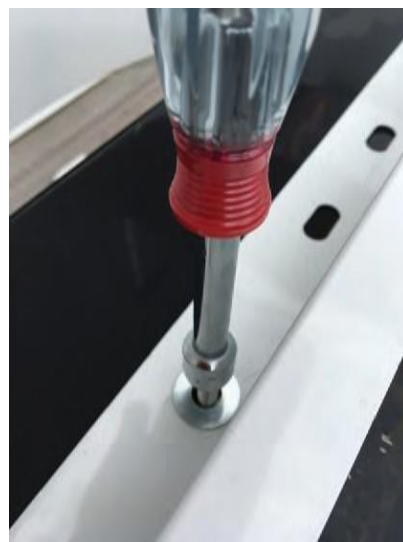

Note: In case of obstructions, a cold-formed end can be replaced with the Fusion Flat End PN 669103. This must be ordered separately, but is installed in the same fashion.

