


Face signs with numbers
visible to store operator
and customer.

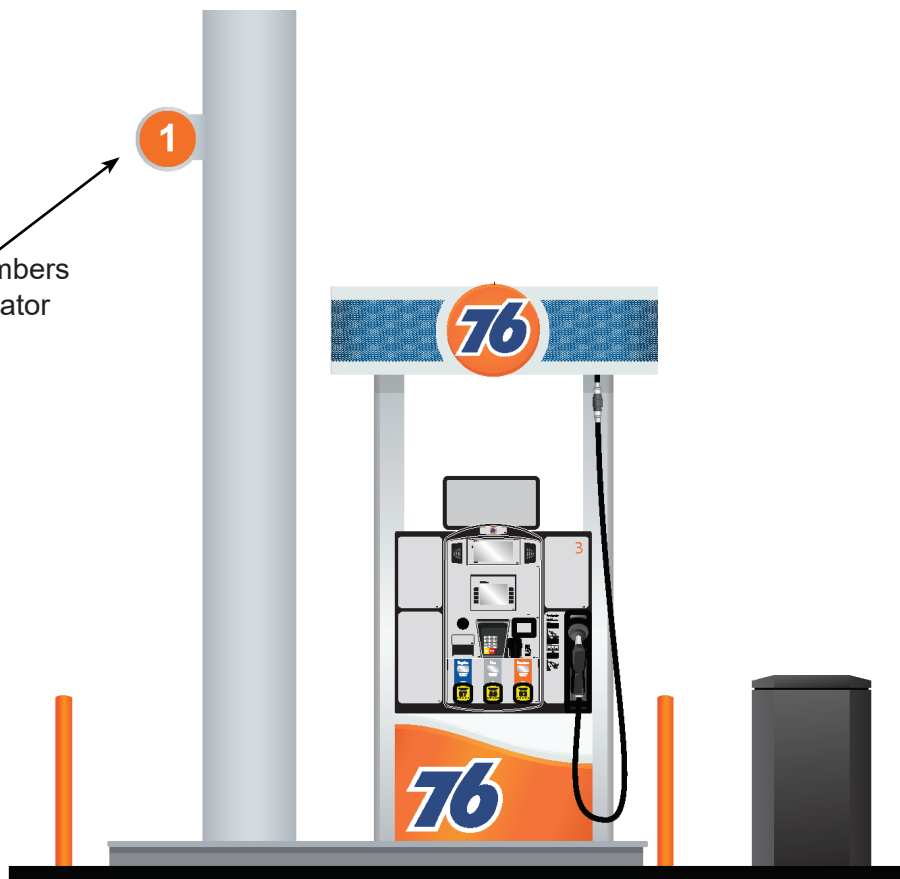

Crest Column Flag Sign Installation Guide PN 747985

Please verify the specifications of your site before beginning. Contact LSI Customer Service at 1-800-231-0129 for installation support.

Read through all of the instructions prior to beginning installation, and verify (using the packing list) that all parts have been received and are in good condition.

Customer Service

Phone No. : 800-231-0129

Address: 14902 Sommermeyer Street, Ste. 120
Houston, TX 77041


Thomas Thompson, Field Service

Phone No. : 713-744-4135


Email: Thomas.Thompson@lsi-industries.com



Parts

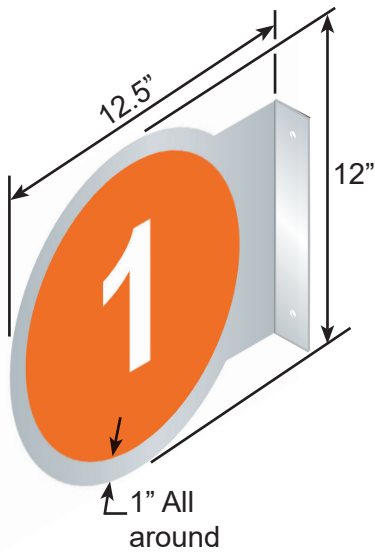


(Above) SGN FLAG 1.5X12X12.5
(WITHOUT DECALS)
Part No. 644786

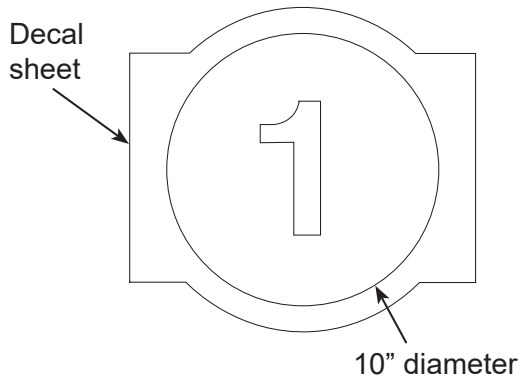

SCR DRILL TEK4 #12X7/8

Part No. 239724


(For < 3/8" steel column wall thickness)



SCR DRILL TEK5 #12-24X1-1/4

Part No. 716424

(For > 1/2" steel column wall thickness)




WSHR F/W 1/4 .285
IDX.625OD
Part No. 240961



EXTERNAL TOOTH
LOCK WASHER




(Below) BLADE SIGN NUMBER SET
1-12 (2 OF EACH), Part No. 644785

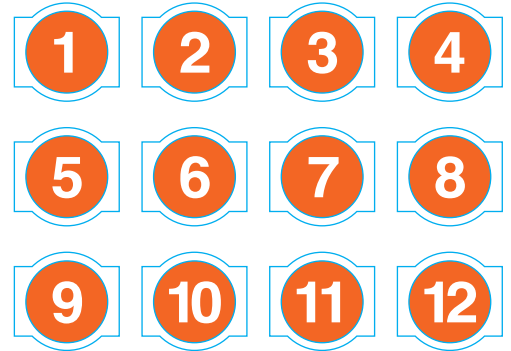

(Below) BLADE SIGN NUMBER SET
13-24 (2 OF EACH), Part No. 653226



(Below) BLADE SIGN NUMBER SET
25-40 (2 OF EACH), Part No. 739503

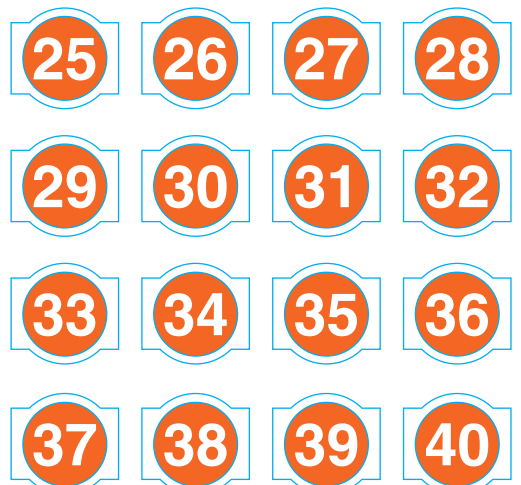


Flag Sign Installation

Installer is responsible to determine if provided fasteners are adequate for site specific task before installing any flag signs. If alternate fasteners are required, installer is to source prior to any installation.

Blade signs are installed 10'-6" \pm 1" off the ground at the column (9'-8" minimum if obstruction above forces blade sign down). They shall be centered on the column to which they are attached. Each blade sign is installed with two hex washer head self-drilling screws provided (installer to provide fasteners for special situations, e.g., masonry column). The blade sign must be positioned on the pole so the customer and store employee can see it. Mark and drill 3/16" dia. or #8 drill bit pilot holes. **DO NOT USE EXISTING HOLES** (to prevent stripping from wind vibration). Assess column wall thickness, and choose correct screw length from parts list. Use one washer (.285" ID x .625" O.D.), one external tooth lock washer and one screw Tek 4 #12 x 7/8" (steel column wall up to 3/8") or Tek 4 or 5 #12 x 1-1/4" (wall thicker than 1/2") in each hole. **MAKE SURE SCREWS ARE TIGHT WITHOUT OVERTORQUING.**

Verify all numbers and orientation/placement prior to fabrication using numbers from decal sheet provided. For application of number decals, refer to 3M product bulletin IF 1.5 for hand application of vinyl film.

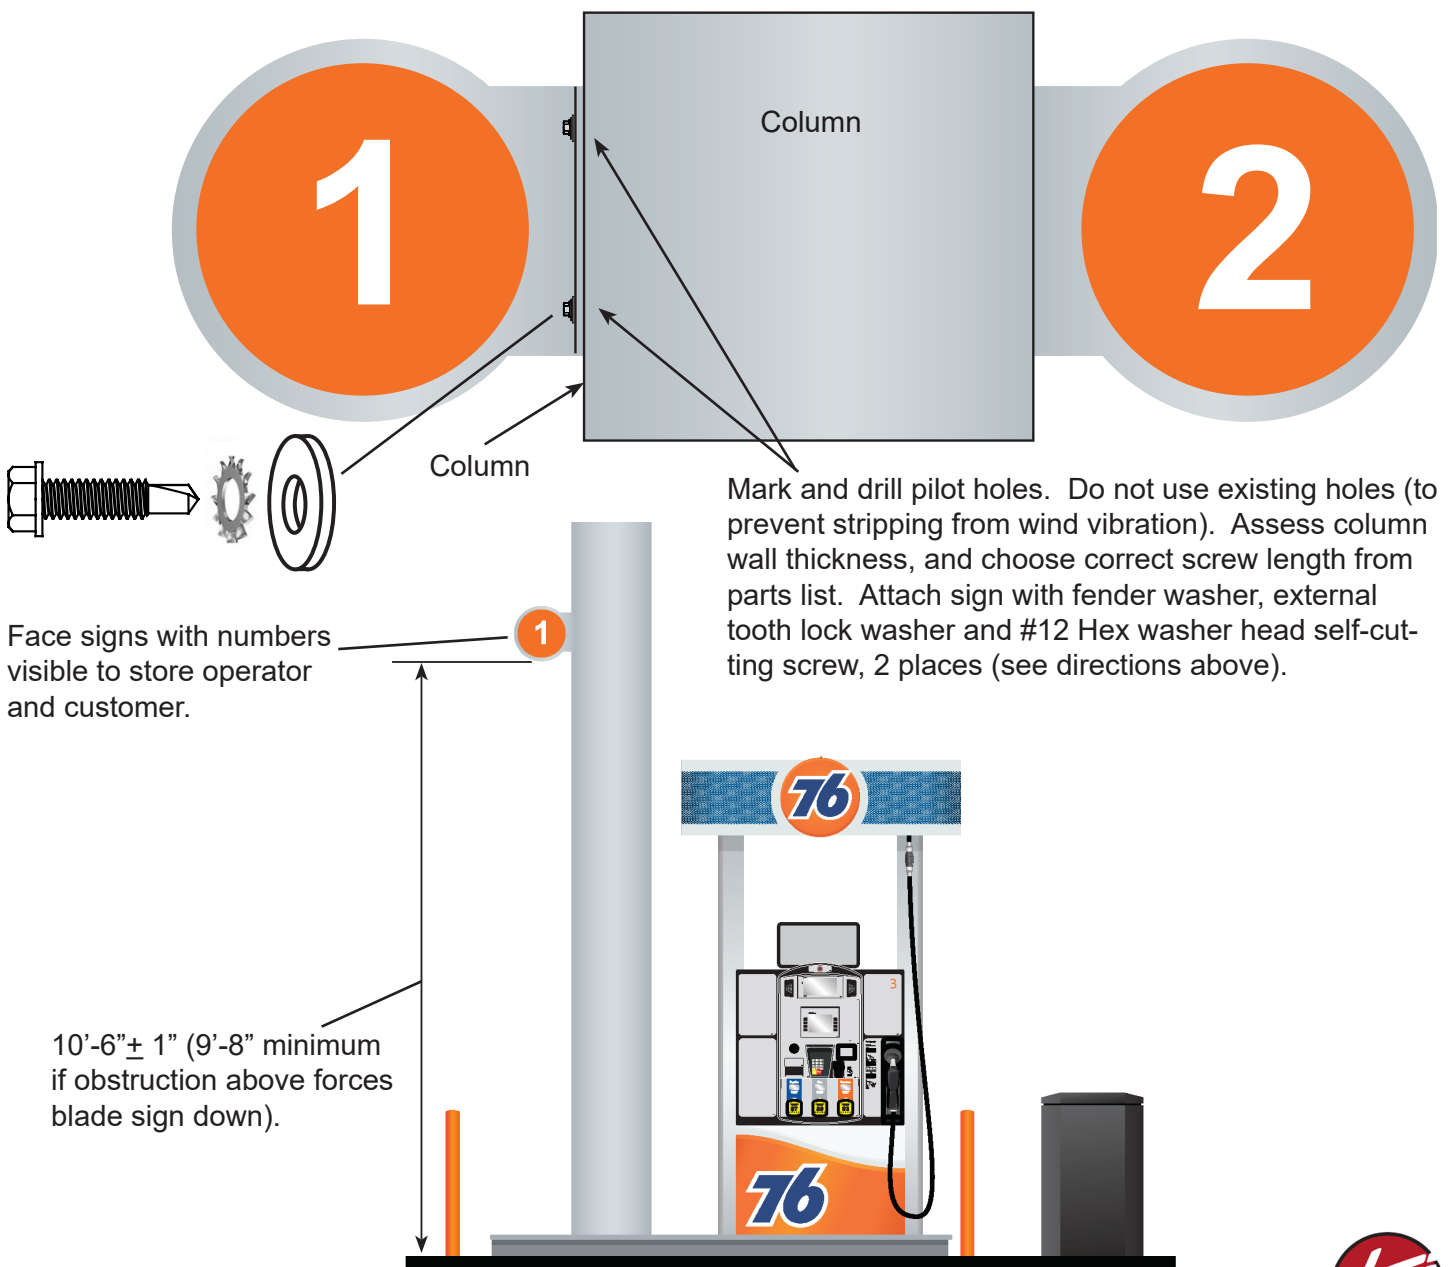

Fastener Recommendations

LSI is not liable for alternate fasteners and substrate. It is the responsibility of the installer to verify the adequacy of the substrate and provide the proper fasteners for attachment.

- For solid wood, use lag screws or wood screws.
- For particle board, drywall, or stucco, use expanding shields and self-tapping screws.
- For brick or concrete, use a masonry shield and self-tapping screws.
- For light gauge sheet metal column wraps, a rivnut or similar threaded clinch nut is recommended, with 1/4-20 hex washer head machine screws.
- For Exterior Insulation Finishing System (EIFS), contact manufacturer for recommendations on attachment.
- For plastic column wraps, additional structure may be required to support these flag signs. Contact column cladding manufacturer for recommendations.
- For stone or other irregular surfaces, the flag signs are not recommended.

The wind load of these signs is roughly 1 sq. ft. At a nominal wind speed of 115 mph, the force applied is 30 to 35 pounds.

