76 Wave Encore, Encore S Dispenser Image Refresh
Installation Guide

This Phillips image refresh is for an Encore or Encore S pump dispenser. Please verify the specifications of your site before beginning. Contact LSI Customer Service at 1-800-231-0129 for installation support.

Read through all of the instructions prior to beginning installation, and verify (using the packing list) that all parts have been received and are in good condition.

Customer Service

Phone No. :   1-800-231-0129
Address: 14902 Sommermeyer Street, Ste. 120
Houston, TX 77041

Parts (Crest/Wave)

Universal riser

Riser cover cap (top/bottom)
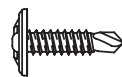
Tuxedo riser

Riser cover cap (top/ bottom)
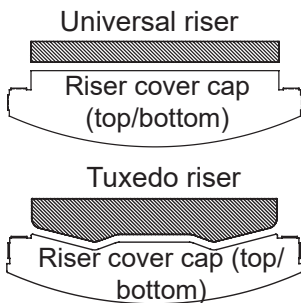
Qty. 4 of riser cover cap for universal riser or tuxedo riser

Door, 76 Wave, Qty. 2

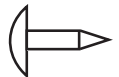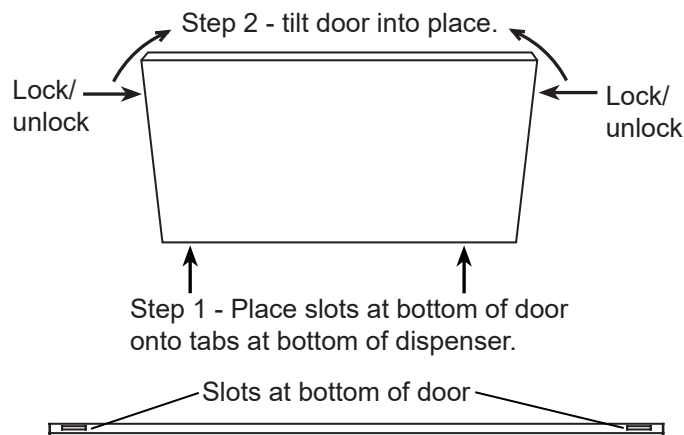#8 X 3/4" K-lathe Tek screws Qty. 20 silver and 20 orange

Riser cover, 76 Wave, Qty. 2

Riser pump extension bracket, silver/orange, Qty. 4
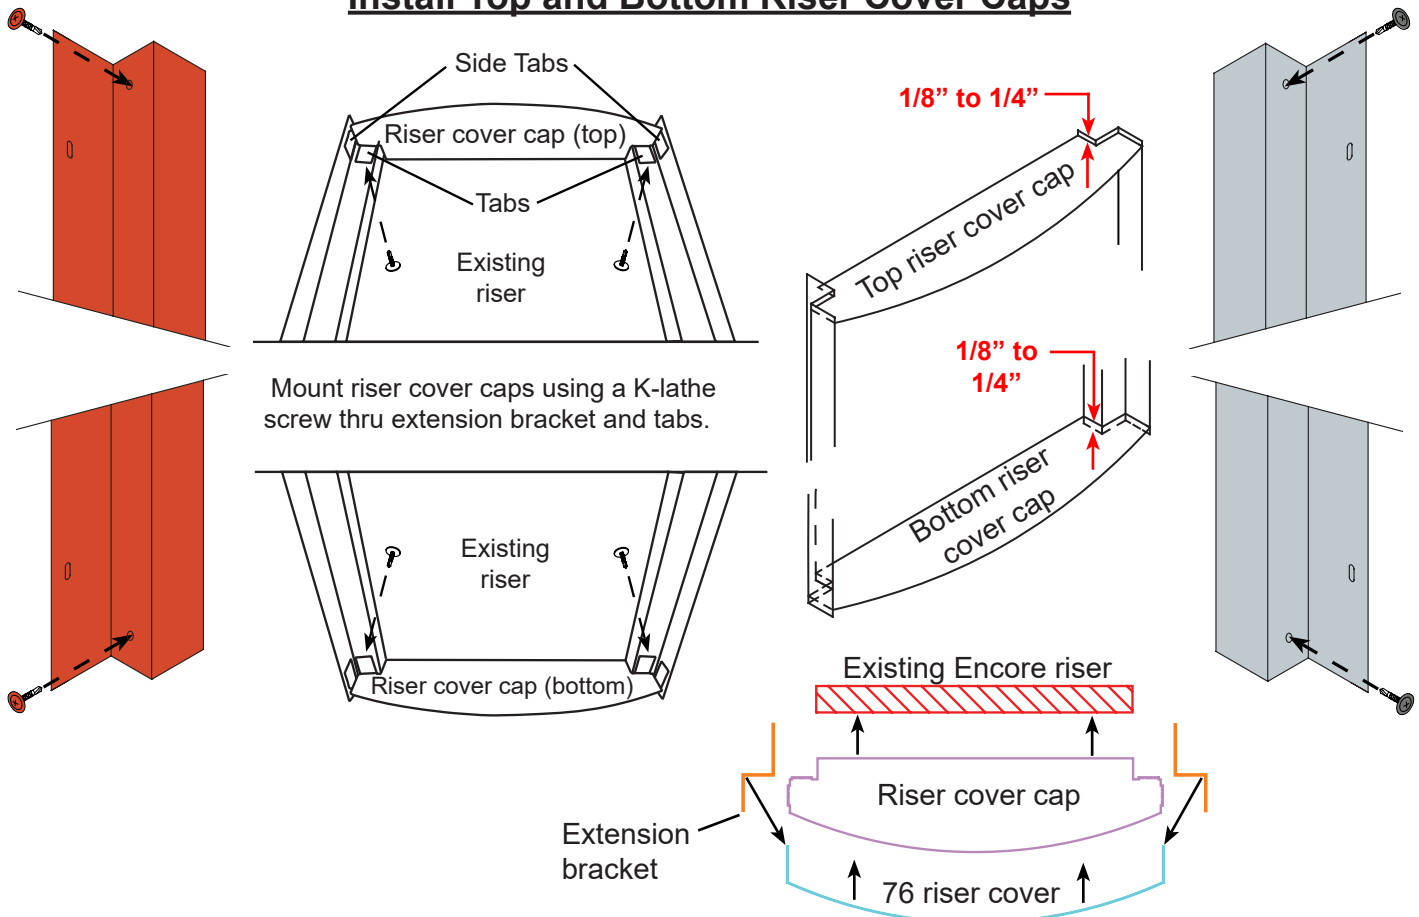
10-32 X 3/4" pan head machine screws (silver) Qty. 10

Remove/Install Doors, 2 Plcs

Step 2 - tilt door into place.

Lock/ unlock

Lock/ unlock

Step 1 - Place slots at bottom of door onto tabs at bottom of dispenser.

Slots at bottom of door

Install Extension Brackets

MACHINE BOLTS ARE PROVIDED FOR MOUNTING EXTENSION BRACKETS TO DISPENSER USING EXISTING HOLES IN DISPENSER THAT ALIGN WITH SLOTS IN EXTENSION BRACKETS.

INSTALLER MUST NOT DRILL NEW HOLES IN DISPENSER.

IF EXISTING HOLES IN DISPENSER AND MATCHING MACHINE SCREWS PROVIDED BY LSI ARE NOT USED TO ATTACH EXTENSION BRACKETS, THE DISPENSER MANUFACTURER'S WARRANTY WILL BE VOIDED. LSI IS NOT RESPONSIBLE FOR INSTALLER ERRORS.

Extension bracket

Install Top and Bottom Riser Cover Caps

Side Tabs

Riser cover cap (top)

Tabs

Existing riser

Mount riser cover caps using a K-lathe screw thru extension bracket and tabs.

Existing riser

Riser cover cap (bottom)

1/8" to 1/4"

Top riser cover cap

1/8" to 1/4"

Bottom riser cover cap

Existing Encore riser

Riser cover cap

Extension bracket

76 riser cover

Install Top and Bottom Riser Cover Caps

Universal riser

Riser cover cap
(top/bottom)

Existing
universal riser

Note that existing dispenser may have Tuxedo Risers. Riser cover caps for this will be as shown below.

Tuxedo riser

Riser cover cap
(top/bottom)

Existing Tuxedo riser

Make sure top and bottom riser cover caps are mounted level on both ends.

Front View

Install Riser Covers (2 Plcs)

Side returns of riser covers go <u>inside</u> extension brackets.

Existing riser

Extension bracket

Extension brackets go over riser covers.

Valance

1/2" CRITICAL
(top of riser cover to bottom of valance)

Riser cover

Ground

1" clearance to ground varies

Extension bracket

Place new riser covers inside extension brackets.
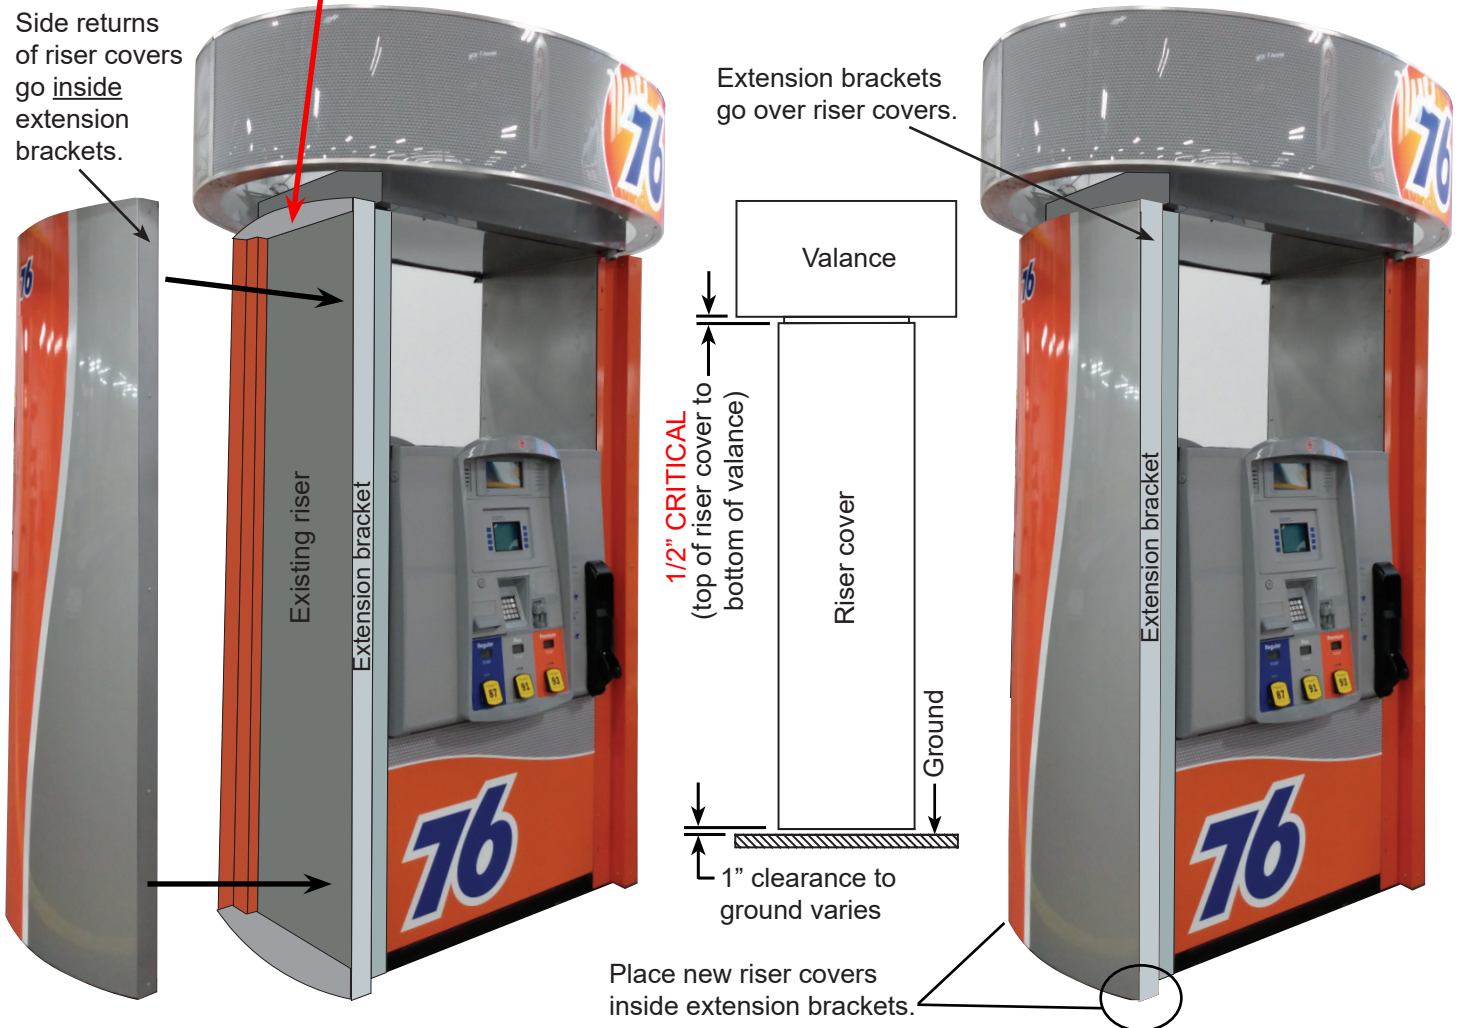
Place riser cover <u>between</u> extension brackets (<u>extension brackets overlap sides of riser cover</u>). Attach by driving K-lathe screws (painted to match extension brackets) thru extension brackets into sides of riser cover. Top and bottom K-lathe screws pass thru side tabs of top and bottom riser cover caps. Install two riser covers per dispenser.

APPENDIX

9/20/2021 - Date created.

11/10/2021 - Changed Torx screws to K-lathe in parts list on sheet 1. Added 6-32 X1/4" pan head screws to parts list. Added statements to mount riser caps level and make sure riser covers are inside extension brackets.

3/27/2023 - Removed Shield image parts from guide. Changed gap at top of new riser cover to 1/2" below valance. Shortened guide format and eliminated pages. Changed 6-32 X1/4" pan head screws on parts list to 10-32 X 3/4" to match JDE BOM.

3/28/2023 - Minor update to dispenser image on p. 1.

4/3/2023 - Changed title on p. 1 to "76 Wave Encore...", and changed term "riser" to "riser cover" throughout document.