



Phillips 66 Rivet LED Light Bar Signature Image

INSTALLATION GUIDE PN 662975

This product is designed to be installed with the Phillips 66 Rivet Signature Image. Please verify that your site meets this classification and the new canopy fascia has been installed prior to beginning LED light bar installation. Contact LSI Customer Service at **1-800-231-0129** for installation support.

Read through all of the instructions prior to beginning installation, and verify (using the packing list) that all parts have been received and are in good condition.

The location of the disconnect switch after installation shall comply with Article 600 (A)(1) of the National Electrical Code.

This product is intended to be installed in accordance with the requirements of Article 600 of the National Electrical Code and/or other applicable local codes. This includes proper grounding and bonding of the sign.

Customer Service

Phone No. : 800-231-0129


Thomas Thompson, Field Service

Phone No. : 713-744-4135

Email: Thomas.Thompson@lsicorp.com



UPDATED INSTRUCTIONS: Use PN 771520 - SCR TEK HWH #12X1 SHEETING, STL ZINC W/ WSHR to fasten the Light Bar to the top of the ACM panel on canopy. The sheeting screws will be driven thru the pre-punched holes in the Light Bar and ACM panel to the top mounting angle. The sheeting screws will provide more strength to hold the ACM panels to the canopy in high wind.

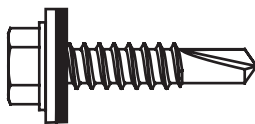

PN 771520, #12X1 SHEETING
SCREW

***NOTE* BEFORE CUTTING OR INSTALLING ANY
ELEMENTS, FIELD VERIFY DIMENSIONS!**

Verification is VITAL in ensuring all elements are
installed properly

**PLEASE REFER TO ANY NECESSARY SITE SPECIFIC
LAYOUTS AND/OR RENDERINGS FOR GUIDANCE WITH
CUT SECTIONS AND ELECTRICAL WIRING.**

**The location of the disconnect switch after
installation shall comply with Article 600 (A)(1) of the
National Electrical Code.**


**This product is intended to be installed in accordance
with the requirements of Article 600 of the National
Electrical Code and/or other applicable local codes.
This includes proper grounding and bonding of the
product.**




Part List

PLEASE NOTE


The packing lists below will vary per site, depending on what is needed. These lists are to give the installer a guideline of what should be received from LSI. LED light bar quantity will vary by site. Custom material will not be included below. Please make sure to check the packing list included with each shipment for more accurate verification.



118" LED Light Bar Section w/ White LED Assembly
Part Number 645329 (Red)




59" LED Light Bar Section w/ White LED Assembly
Part Number 656339 (Red)




29.5" LED Light Bar Section w/ White LED Assembly, Part Number 680120 (Red)

13"x13" LED Light Bar Corner w/
White LED Assembly
Part Number 656338 (Red)

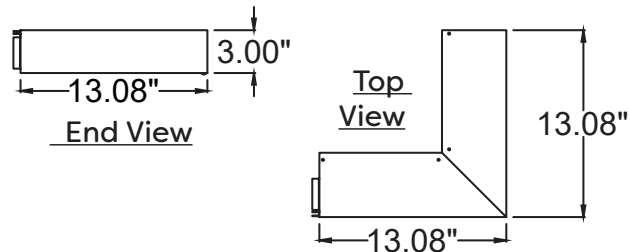

End Caps - Left & Right Set
Part Number 656337 (Red)

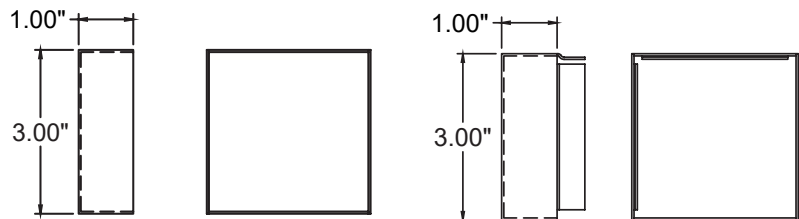

60W Power Supply
Part Number 640933


3" 8915 Matte Film w/ Premask
Part Number 651176

2X60W Power Supply
Part Number 702039

LED Light Bar Hardware Kit (included
with LED Light Bar - Silver)

5' Jumper Cable
Part Number 502548

K-lathe self-drilling screw
#8 x 3/4" (Red)

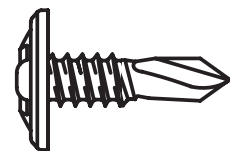

Please read the following before beginning installation

LSI Components

LSI Graphic Solutions Plus provides components for the Phillips 66 Rivet canopy system. The components provided by LSI have been evaluated and tested to meet requirements. The LED systems are UL recognized and listed under UL 48 as outline lighting. These installation guidelines must be followed to keep these certain specifications, and adjusted as required to meet local codes and site conditions.

Information to know about your site

Before beginning any installation, be sure to determine with your local Phillips 66 representative that you are using the current Image Standards. Your order will be coordinated with a BIC project manager to determine the product you need to complete your site. Coordination between installer/project manager/representative is essential to the success of this program.

Structural knowledge of your site


Information about your canopy is needed to be able to provide the correct components and plan a safe and structurally sound installation. The length of all sides of the canopy is important, as well as logo placement, to determine the number of sections needed and the layout of lighting elements and power sources. It is the installer's responsibility to ensure that the existing structure is sound and capable of supporting the weight of the LED light bar, as well as any additional wind load, snow load, or other potential conditions. The added weight of the logos must also be considered, and any additional bracing or structure required to support these must be added.

Component specs

The LED system requires 5.91W/ft. of power. One 60W power supply or half of a 2X60W power supply is required to run one 118" section of LED light bar. Electrical service must be provided for these in 120VAC 60hz, roughly every 10ft. or 20ft. on a canopy run, depending on the layout. Other voltage and frequency power supplies are available as an option. The 60W power source draws 1.1A, so a typical canopy of up to 150 illuminated ft. of LED lighting can be run from a single 20A circuit, not including logo signs or deck lighting.

This sign is intended to be installed in accordance with the requirements of Article 600 of the National Electrical Code and/or other applicable local codes. This includes proper grounding and bonding of the sign.



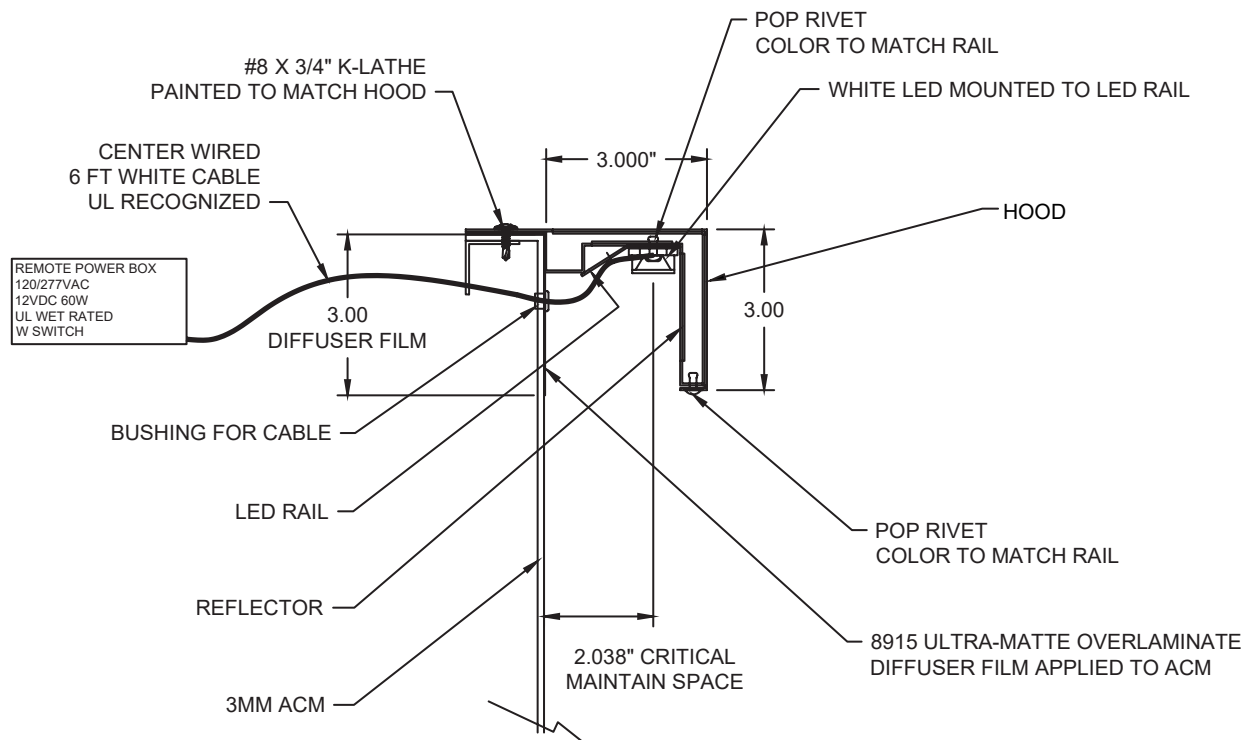

Before beginning installation

Identify the sides of the canopy that will receive LED light bar BEFORE BEGINNING INSTALLATION. Refer to renderings/layouts provided by BIC for specifications.

Be sure that matte diffuser film has been applied to all sides receiving LED light bar. All matte film is to be applied on site by the installer. DO NOT PROCEED WITH LED LIGHT BAR UNTIL MATTE FILM HAS BEEN APPLIED.

There are offsets on the left hand side of each section/corner. These offsets will fit into the next section, securing them together without gaps.


The LED light bar sections must be installed tight and flush against the fascia, with as little of a gap as possible between the reflector and the ACM. Failure to do so will cause improper illumination of the canopy.

If a canopy has four sides of illumination, four corners will need to be installed.

If a canopy only has three sides of illumination, end caps will be installed to terminate the LED light bar run at the edge of the canopy.


There will NEVER be less than three sides of LED light bar on a gas canopy. If a rendering/layout calls out less than three, verify!

Use #8 x 3/4" K-Lathe screws (red) shown below to attach the top of the LED light bar section to the ACM.

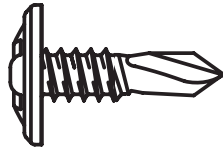

If matte film has not been applied yet, apply the 8915 matte film to the top of all sides of canopy getting LED light bar. Follow all 3M vinyl application guidelines to ensure the matte film is installed properly.

1. Install the corner sections FIRST. Drill a 5/8" diameter hole 1-1/2" from the top of the ACM panel for each of the power cables (make sure that the hole lines up with the respective cable so that the bushing will not have issues when placed in the ACM – DO NOT drill so that the cable will be stretched too tightly and cause potential current/future issues).

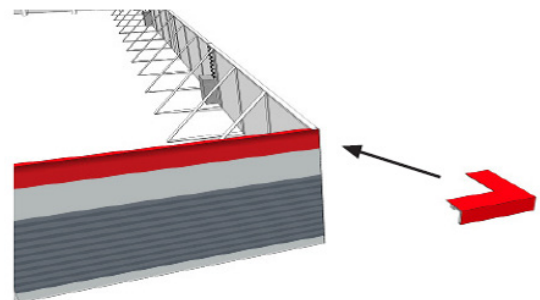


Ensure that the corner is flush and tight against the ACM before securing in place with the provided hardware. **The hood and reflector edges should be EVEN, and the screw should run through the pilot hole in the HOOD.** Run the cable through the drilled hole and secure the bushing in place in the ACM fascia.



Installing Light Bar Sections


2. Begin installing LED light bar sections from the corner out. LED light bar on a logo side will be installed BEHIND the logo. If on a side where the LED light bar will terminate with an end cap, try to have any cut sections down at the end cap end of canopy.

Follow the same process as above, drilling a 5/8" diameter hole 1-1/2" from the top of the ACM panel for each section. The hood and reflector edges should be EVEN, and the screw should run through the pilot hole in the HOOD. When approaching the end of a canopy side, pay close attention to make sure that the remaining cut LED light bar section will not be less than 24". If it appears that the last section would be less than 24", two cut sections will be necessary (or a 29.5"/59" section if provided and a cut 118" section).

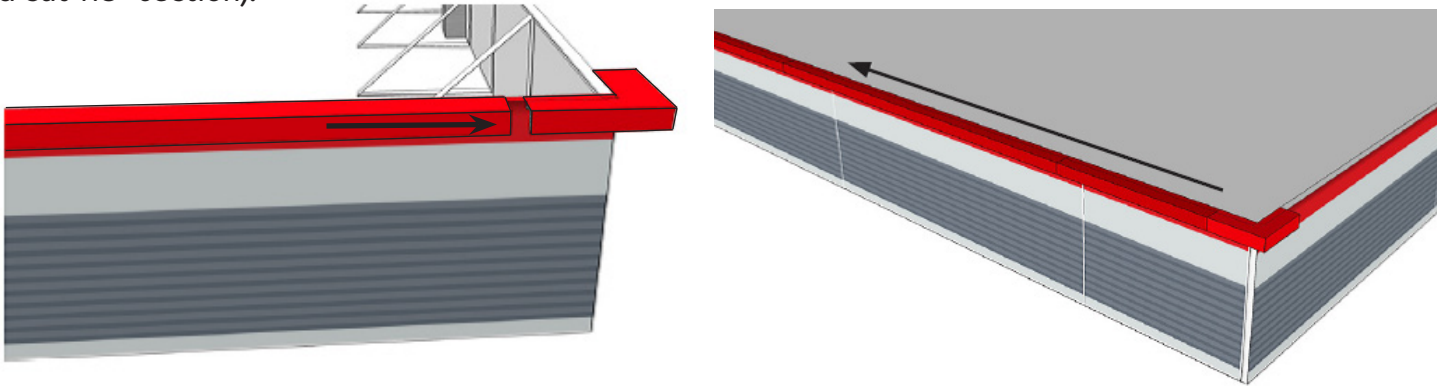

3. Measure and cut the necessary length piece(s) to fill the remaining space. DO NOT CUT THROUGH THE LED MODULES! It may be necessary to remove or relocate an LED if the cut falls in that area.

In some cases, a 29.5" or 59" LED light bar section may be sent to fill the remaining space, which has its own dedicated wire coming from the end of the assembly. It is also possible that a side will need a 29.5" or 59" section AND an additional cut section. Use the 29.5" or 59" section at the end and cut the adjacent 118" section to fit.

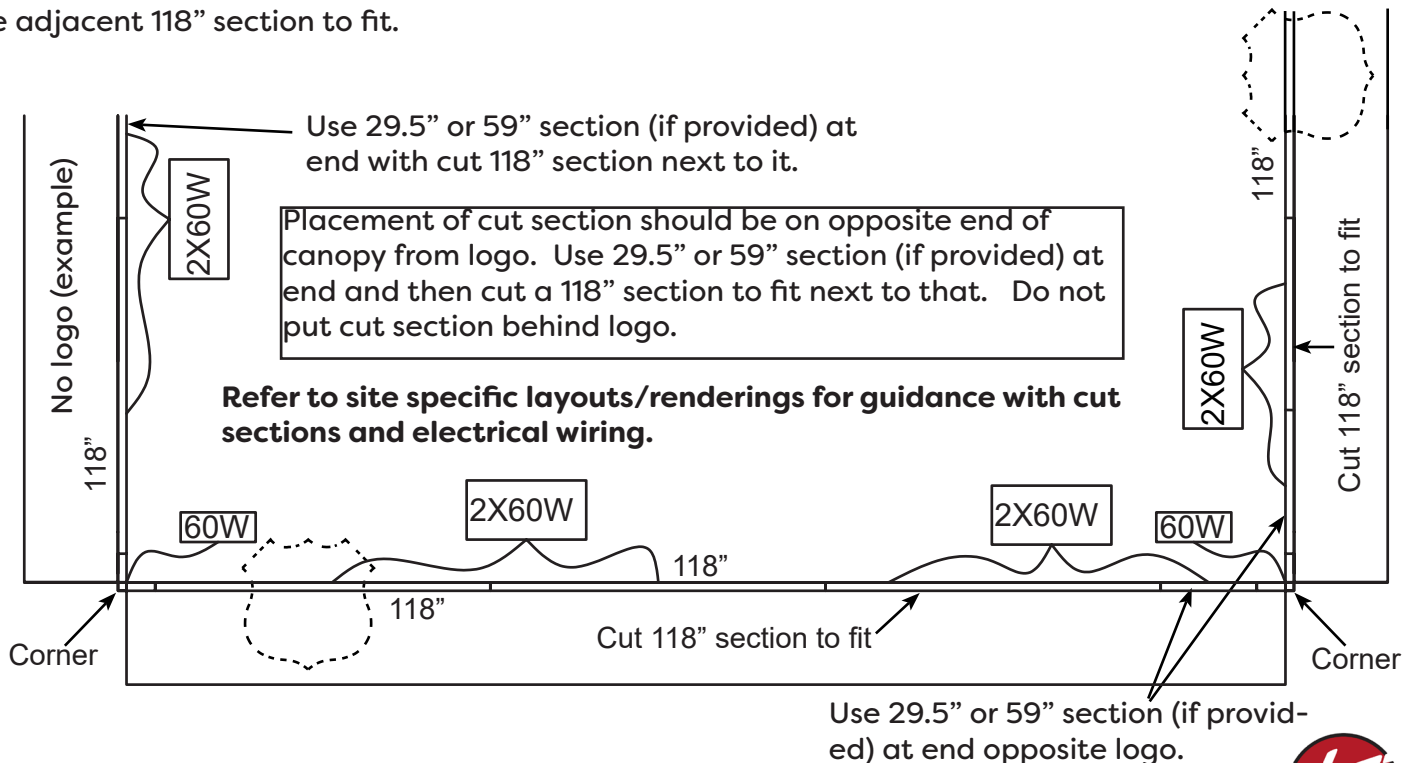


Installing LED Light Bar

(FOR PLACEMENT OF LOGO, REFER TO CONOCO RIVET ACM FASCIA INSTALLATION GUIDE.)

Be mindful of where the offset is needed on each section – always cut so that the offset is on the usable piece. Close off any wires that need to be cut with a dab of silicone to prevent water from entering the wiring.

4. If an LED light bar run ends against an unlit side, end caps (left and right) will need to be installed. The end caps will need to be installed flush with the edge of the canopy. When cutting an LED light bar section, keep in mind that it must end 1" before the edge of the canopy for the end cap to fit.

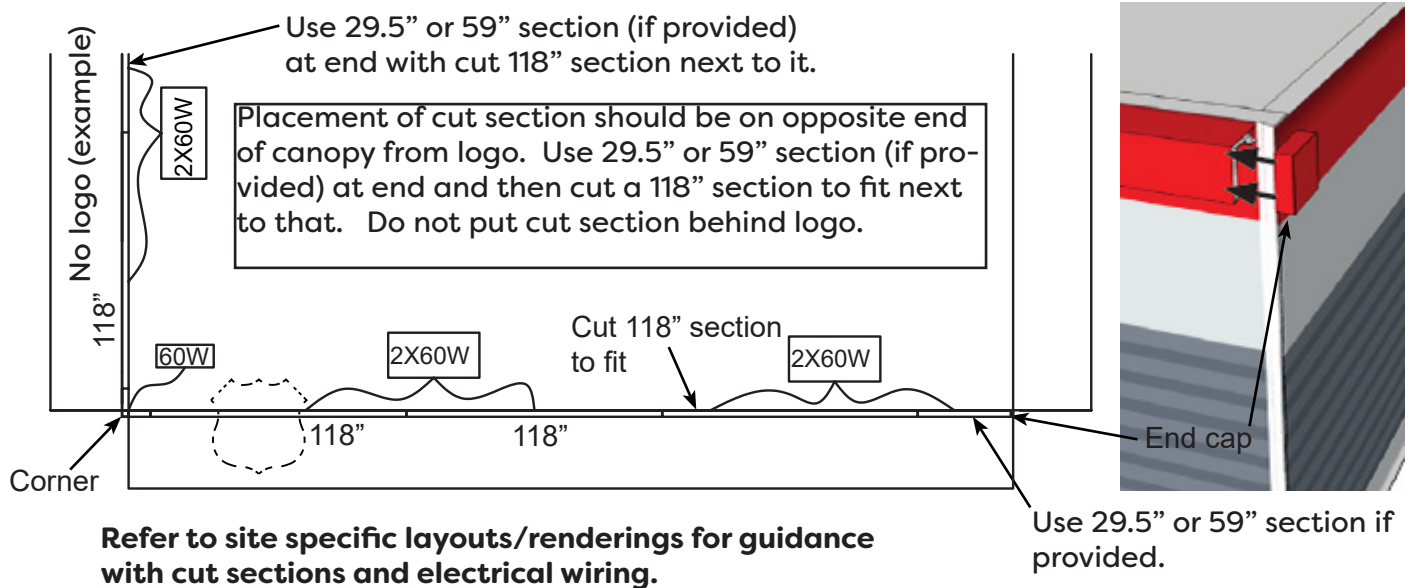

5. Apply paintable caulk/silicone to any gaps in the corner sections. Be sure to check and make sure there are no light leaks between any of the LED light bar sections, and that all sections have been installed flush and tight against the canopy surface.

Caulk the corners




Obtuse/Acute angles

For sites with non-90° angles, field modifications will be needed to make the LED light bar system work.

Acute angles – The inner portion of the corner section will need to be cut down to accommodate a tighter angle, to be no less than a 65°. Be sure not to cut the LEDs!

Obtuse angles – The corner section can be opened up wider to accommodate a wider angle, and a filler panel will need to be fabricated in the field to fit over the created gap between the sides.

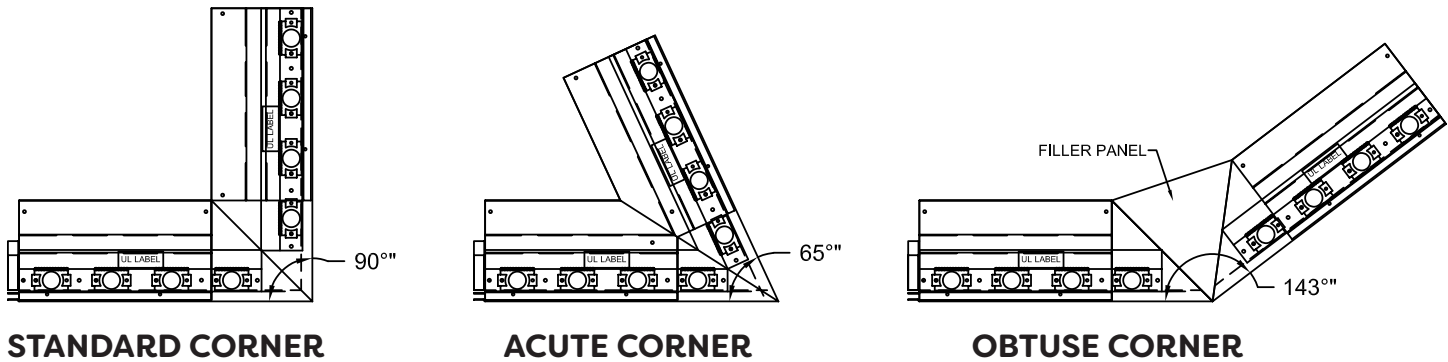

Electrical

LED Specifications:

1.32W/module, 5.91W/ft, 83Lm/W

118" LED light bar – 44 LEDs per section = 58.08W

59" LED light bar – 22 LEDs per section = 29.04W

29.5" LED light bar – 11 LEDs per section = 14.52W

13"x13" corner – 4 LEDs per section (x2) = 10.56W

Power Supply Specifications:

60W power supply – 100-277VAC / 12VDC, 1.1A-0.45A


2X60W power supply – 100-277VAC / 12VDC, 2.2A-0.90A

Each 118" LED light bar section requires one 60W power supply (or half of a 2X60W box).

Cut sections/corners can be combined onto one 60W power supply however, a 60W power supply is provided with each corner section. If combining sections/corner, then get as close as possible to maximizing the power supply potential for optimum efficiency; running 105" of LED light bar on a 60W power supply will be better than running 20" of LED light bar on a 60W power supply. **DO NOT EXCEED THE MAXIMUM WATTS!**



Installing LED Light Bar

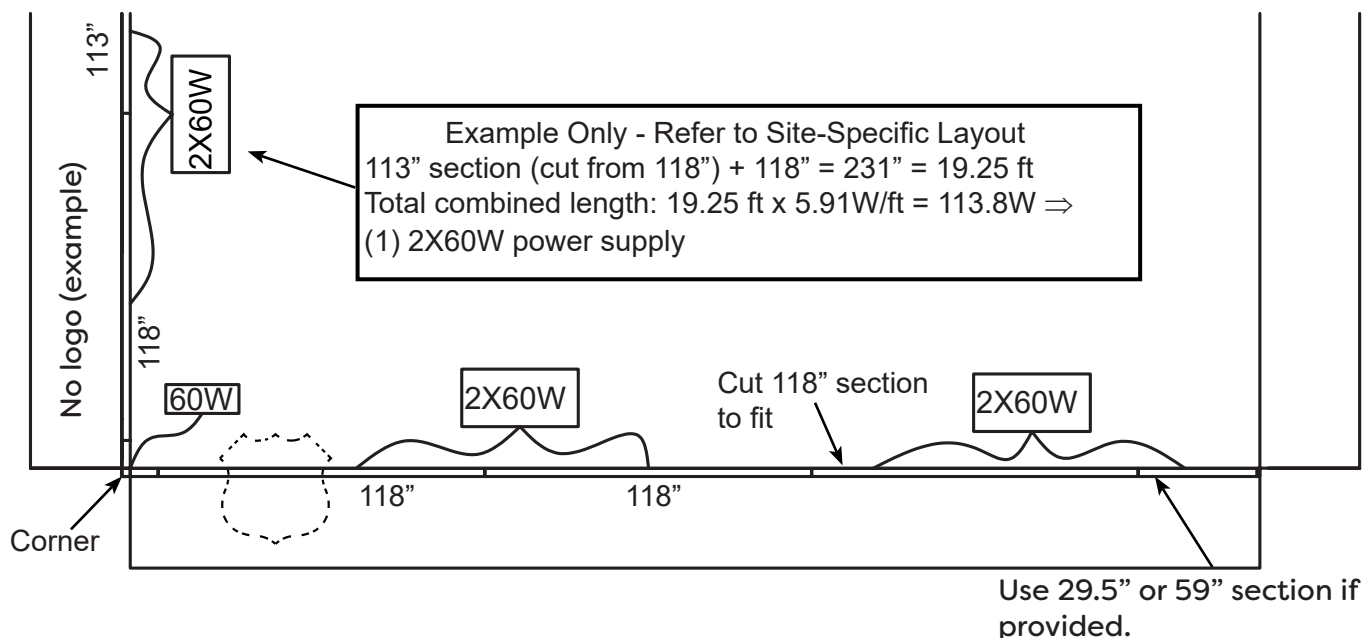

Refer to site specific layouts/renderings for guidance with cut sections and electrical wiring.

Failure to follow these guidelines can blow out the power supply and cause damage to the LEDs.

Appendix

06/27/2017 - Date created

10/17/2017 - Guide changed to reflect LED light bar Obtuse/Acute angles.

2/27/2020 - Updated example layouts to show 2X60W power supplies, and not show as many sections/corners wired to a single power supply. Added 29.5" LED light bar to Part List (p. 3). On p. 7, Section 2 (**Begin installing LED light bar sections...**), changed "If it appears that the last section would be less than 24", two cut sections will be necessary", to "If it appears that the last section would be less than 24, two cut sections will be necessary (or a 29.5"/59" section if provided and a cut 118" section)". On p. 7, Section 3 (**Measure & cut the...**), removed "Be mindful that some "drop" from a cut section may be used for a different side."

3/9/2020 - Changed K-lathe screw from #10 to #8 on p. 5.

9/8/2021 - Added updated instructions (yellow box) to use PN 771520, #12X1 sheeting screws to fasten Light Bar (for more strength in high wind).

